



## How to choose your stitch

To select a stitch, simply turn the stitch selection dial. The stitch selection dial may be turned in either direction. The following page shows the recommended range of stitch lengths and widths.

Adjust the stitch length with the stitch length dial. You may choose stitch width by turning the stitch width dial.

Adjust the stitch length and stitch width according to the fabric being used.

To obtain any of the other stitches shown in the upper row on the stitch selection panel, select the letter above the stitch with the stitch selection dial. Adjust the stitch length and the stitch width with the control dials according to the result desired.

To obtain any of the stitches on the second row, turn the stitch length dial to "S1" or "S2", select the stitch desired with stitch selection dial, and adjust the stitch width with the stitch width dial.